



## Dingo Temperature Sensor Wiring Instructions

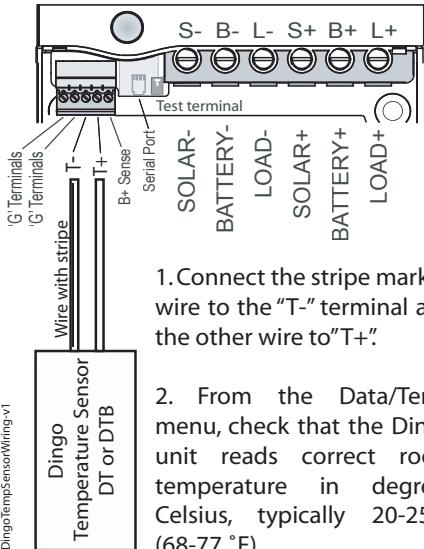


1. Connect the stripe marked wire to the "T-" terminal and the other wire to "T+".
2. From the Data/Temp menu, check that the Dingo unit reads correct room temperature in degrees Celsius, typically 20-25°C (68-77 °F).

## Dingo Temperature Sensor Wiring Instructions

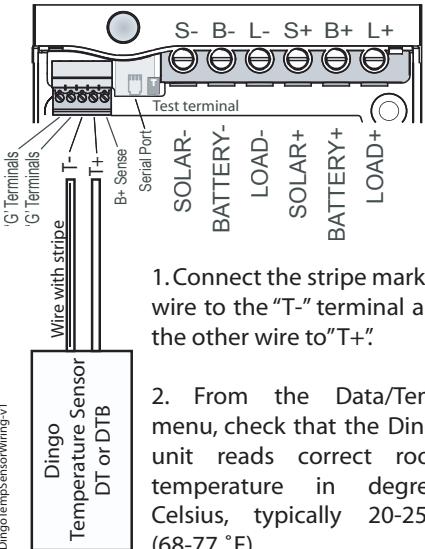


1. Connect the stripe marked wire to the "T-" terminal and the other wire to "T+".
2. From the Data/Temp menu, check that the Dingo unit reads correct room temperature in degrees Celsius, typically 20-25°C (68-77 °F).

## Dingo Temperature Sensor Wiring Instructions

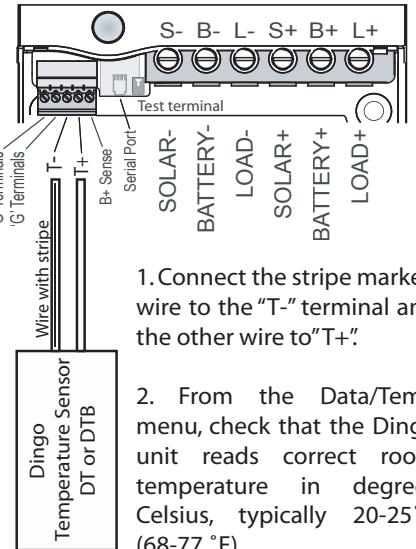


1. Connect the stripe marked wire to the "T-" terminal and the other wire to "T+".
2. From the Data/Temp menu, check that the Dingo unit reads correct room temperature in degrees Celsius, typically 20-25°C (68-77 °F).

## Dingo Temperature Sensor Wiring Instructions

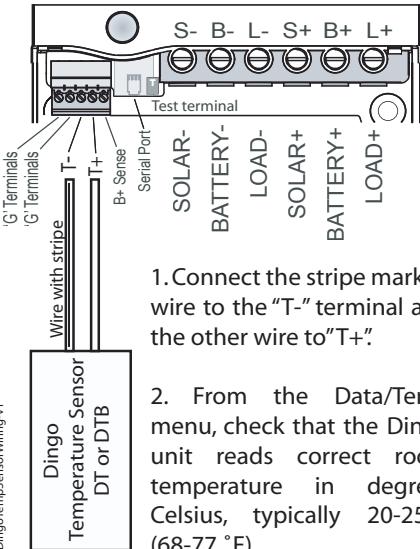


1. Connect the stripe marked wire to the "T-" terminal and the other wire to "T+".
2. From the Data/Temp menu, check that the Dingo unit reads correct room temperature in degrees Celsius, typically 20-25°C (68-77 °F).

## Dingo Temperature Sensor Wiring Instructions

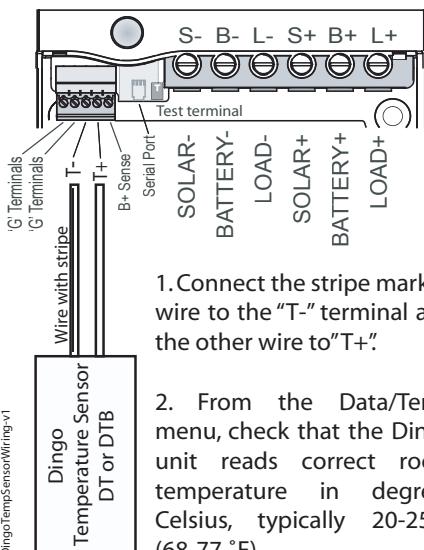


1. Connect the stripe marked wire to the "T-" terminal and the other wire to "T+".
2. From the Data/Temp menu, check that the Dingo unit reads correct room temperature in degrees Celsius, typically 20-25°C (68-77 °F).

## Dingo Temperature Sensor Wiring Instructions

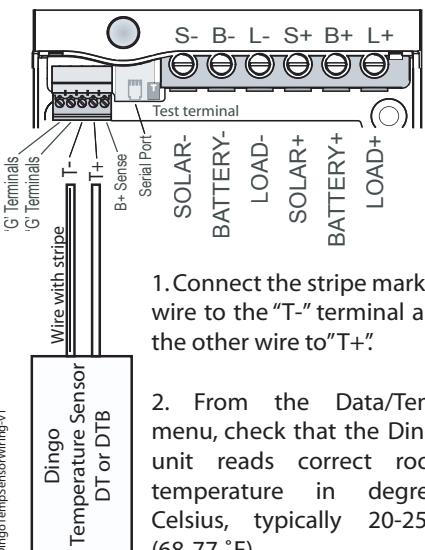


1. Connect the stripe marked wire to the "T-" terminal and the other wire to "T+".
2. From the Data/Temp menu, check that the Dingo unit reads correct room temperature in degrees Celsius, typically 20-25°C (68-77 °F).

## Dingo Temperature Sensor Wiring Instructions

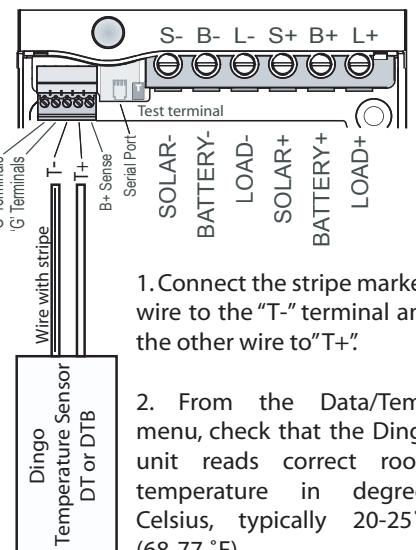

1. Connect the stripe marked wire to the "T-" terminal and the other wire to "T+".
2. From the Data/Temp menu, check that the Dingo unit reads correct room temperature in degrees Celsius, typically 20-25°C (68-77 °F).

## Dingo Temperature Sensor Wiring Instructions

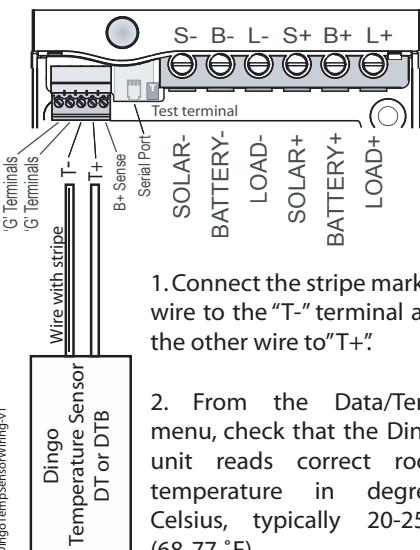

1. Connect the stripe marked wire to the "T-" terminal and the other wire to "T+".
2. From the Data/Temp menu, check that the Dingo unit reads correct room temperature in degrees Celsius, typically 20-25°C (68-77 °F).