

## PL\_Example\_How.do.I.disable.the.Equalise.function.doc

### NOTES:

(1)

***If you are changing to PROG=4 from one of the generic programs (PROG=0-3), you should check that all the settings under the SET/REG menu and SET/MODE menu are correct for your battery/application as these may be different from the generic settings.***

***(See 'Settings used in programs 0-3' table in PL Reference Manual)***

1. SET/PROG=4

*Then check all the settings under the SET/REG menu and SET/MODE menu are correct for your battery/application.*

2. Change SET/EMAX to the same voltage as BMAX (just to be safe!).

3. Make ETIM=0 hrs (this disables the equalisation cycle).