


# PLW



PV Solar Hot Water Controller

## Manual

Read this before installing

Rev. U10. 13102021

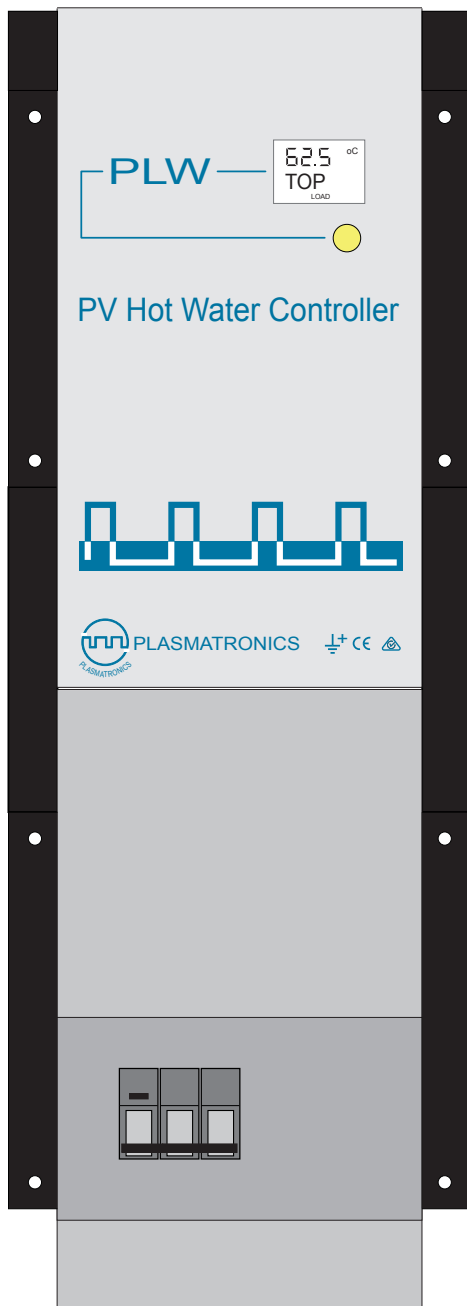

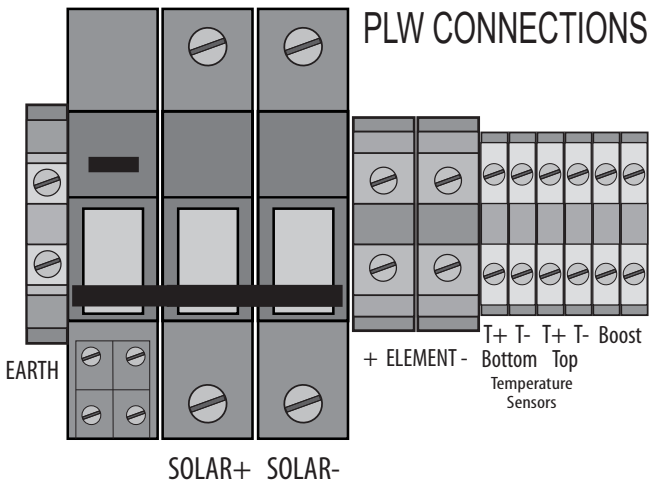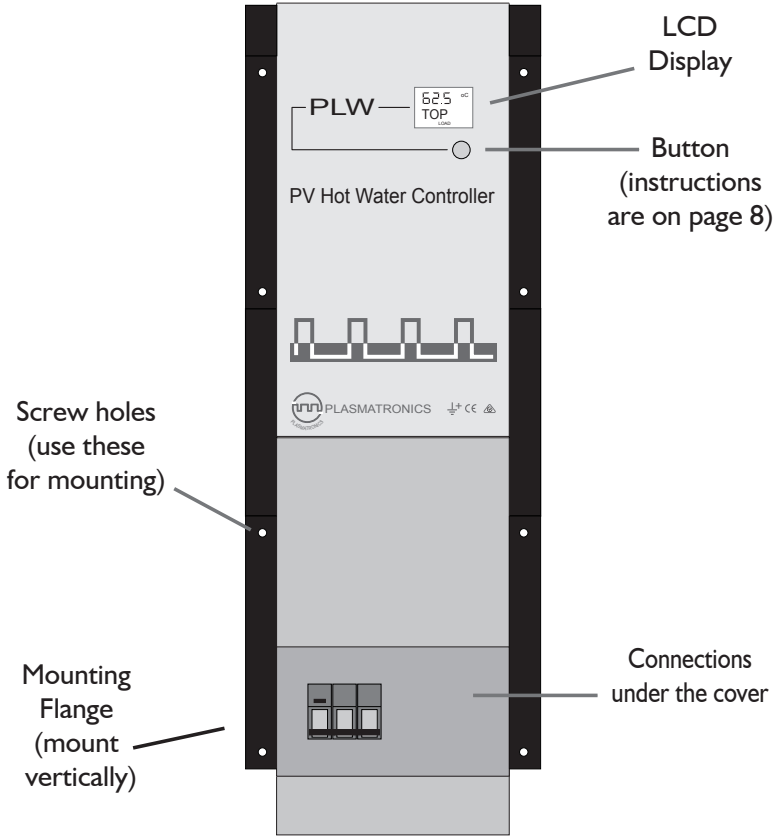

The PLW is a photovoltaic solar hot water controller.

It takes DC current from a nominal 48V Photovoltaic Solar Array and supplies DC current to a custom water heating element. The element must be mounted in a suitable tank.

The PLW can be connected to a low-pressure hot water tank without requiring a mechanical thermostat.

This tank must be open to the atmosphere and not a pressure vessel. If a mechanical thermostat with a safety cutout is also installed on the tank, then a mains pressure tank can be used.

The PLW takes information from two temperature sensors and displays it

to the user. This information is also used to control the maximum tank temperature (thermostat function). The resulting system does not need boosting from other energy sources if an adequately sized PV Array is installed (see guide page 13). Boosting may be provided from an independent heat source e.g. a wood stove. Boosting with mains/grid electricity is not possible with the low voltage element supplied, Tanks with two elements can run one on PV solar and the other on the mains/grid. Prioritised heating of the top of the tank can be achieved by installing the top element kit.

## Contents

<b>Location</b>	<b>4</b>
<b>Wiring Instructions</b>	<b>4</b>
<b>Installing the element</b>	<b>6</b>
<b>Installing the temperature sensors</b>	<b>6</b>
<b>Using the Menus</b>	<b>8</b>
<b>Choosing your settings</b>	<b>9</b>
<b>How it works</b>	<b>10</b>
<b>Monitoring your system</b>	<b>10</b>
<b>Array sizing</b>	<b>13</b>
<b>Sharing the array</b>	<b>13</b>
<b>Tanks with two elements</b>	<b>13</b>
<b>Specifications</b>	<b>15</b>

**PLW Safe handling and transport**

Handle with care. Sensitive parts inside. Do not drop or get wet. Inspect for damage before installation. If damage found, contact Plasmatronics before installing.

**Selecting a Location**

Locate your PLW:

- Indoors
- Do not exceed pollution degree 3
- Max Altitude 2000m
- In a dry environment out of direct sun
- Away from flammable gasses or liquids
- Away from spiders or insects

The PLW can be placed near the tank or where it is convenient for the user.

**Clearance required**

Please leave at least 50mm free space above and below the PLW. No special clearance is required on the sides.

**Wiring Instructions****Mounting your PLW**

Screw to a wall or other stable vertical surface using the mounting holes provided.

**Warning: Use for DC current only!**

The maximum load (i.e. element) current rating is 30A. The PLW requires the use of a custom water-heating element sized for use with a nominal 48V array. *For other voltages contact Plasmatronics.*

**! Do not use any of the original thermostat wiring. Use the pre-wired assembly supplied.**

Connect wires tightly as follows:

- a. Ensure Solar circuit breaker is turned off (down)
- b. Connect the system earth to the earth terminal provided. **Do not earth the array connections.**
- c. Connect the tank earth to the earth terminal provided. .
- d. Connect the load (the pre-wired element assembly) positive to the load positive terminal.
- e. Connect the load (element assembly) negative to the load negative terminal.
- f. Connect both temperature sensors paying particular attention to polarity. Refer to page 7 for instructions. Make sure the sensor labelled Bottom is installed in the bottom of the tank and is connected to the PLW terminals labelled bottom.
- g. Connect the Solar Array positive to the Solar Positive Circuit Breaker provided.
- h. Connect the Solar Array negative to the Solar Negative Circuit Breaker provided.
- i. Do not turn the circuit breaker on until the wiring cover is in place and all remote terminations are made safe.

**Start-up procedure**

When all wiring is complete and correct, turn on the circuit breaker (on is UP). The PLW will only operate in daylight.

**Shutdown procedure**

To turn off in case of a fault or for maintenance etc. turn off the circuit breaker (off is DOWN). Wait 40 sec before opening case.


**WARNING!**

*Never connect anything to the load terminals except the element assembly provided. If you wish to use any other device, please contact Plasmatronics.*

*The PLW has a monitoring circuit which can detect certain faults. If a fault is detected, the circuit breaker will turn off to ensure safety.*


*If you find the breaker has turned off by itself, then there is probably a fault in the PLW and the source of the fault needs to be found and fixed before operation can continue.*

# PLW HOT WATER SYSTEM DIAGRAM (single element)

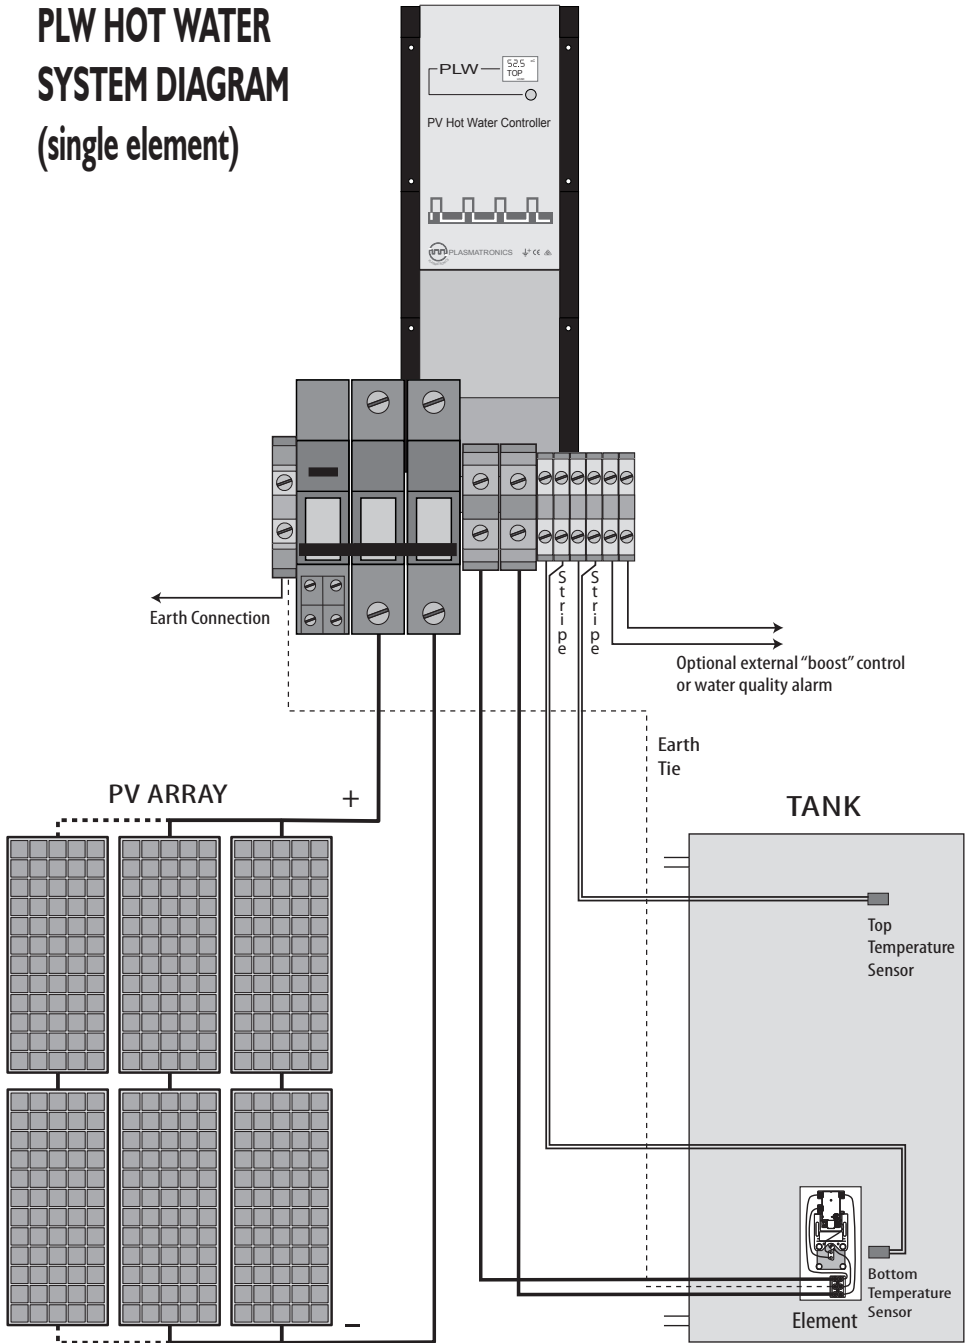

## Installing the element

- a. Isolate any existing electricity supply
- b. Turn off the water supply and drain all the water from the tank
- c. Remove connection area cover from the tank

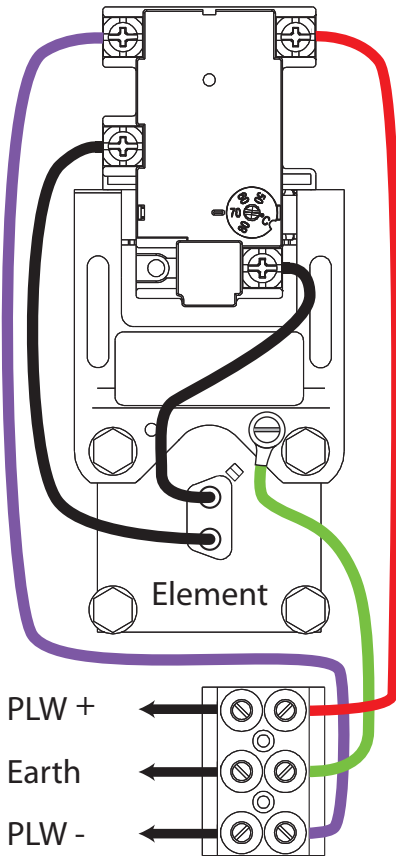

### Element Connection


All connections shown come prewired

- d. Remove the four bolts retaining the existing element. Remove the existing terminal block.
- e. Ease the existing element from the tank. Take note of the orientation of the curve of the element within the tank
- f. Fit new rubber seal to the new element
- g. Fit the new element (and the thermostat). If possible use the same orientation of the curve within the tank as the old element
- h. Fit the four bolts and tighten progressively to a firm tension with hand tools. Too loose will leak, too tight will damage the rubber seal
- i. Mount the terminal block supplied within the enclosure. It is usually possible to mount it in place of the original electrical terminal
- k. Fill the tank with water and check for leaks around the element seal

## Installing the temperature sensors

- a. It is essential to install the bottom temperature sensor. The top sensor is optional (but very useful)
- b. Locate the bottom sensor slightly higher up the tank than the element. Ideally at the same height on the tank as the existing thermostat. It is acceptable but not essential to locate the sensor within the connection area
- c. Using a large screwdriver or similar tool, create a horizontal gap between the metal of the tank and the insulation. The gap should be slightly smaller than the temperature sensor.

- d. Push the sensor into the gap so that it is held against the metal of the tank.
  - e. Locate the top sensor near the top of the tank but lower than the hot water outlet. The reading from the top sensor tells the user a lot about the system. All the water above the sensor height has the same temperature as the sensor or more. It is usually helpful to mount the sensor far enough below the outlet that it represents a useful amount of hot water, for example 1 or 2 typical showers. We suggest at least 150mm. The sensor for the bottom is labelled 'BOTTOM' and the top sensor is labelled 'TOP'.
  - f. There is often no convenient opening in the tank outer skin at the desired sensor height, so it is necessary to create one. Be very careful not to damage the metal of the tank!
  - g. Using a large screwdriver or similar tool, create a horizontal gap between the metal of the tank and the insulation. The gap should be slightly smaller than the temperature sensor.
  - h. Push the sensor into the gap so that it is held against the metal of the tank
  - i. If necessary, the hole can be back filled with a piece of polystyrene foam or spray foam. Be careful not to get any between the sensor and the metal of the tank
  - j. Terminate both sensors to the appropriate connectors in the PLW. Be careful to connect the bottom sensor to the terminals labelled Bottom and the top sensor to the terminals labelled Top. If they are connected to the wrong terminals, the displayed information will be wrong and the thermostat function will not work properly. Correct polarity of each sensor is also essential. The black stripe on the temperature sensor lead goes to the **negative** side.
- If the temperature sensor connection is reversed or it is not connected, then the display will show **Err** or **flash** to indicate an error condition. See back page for details.*

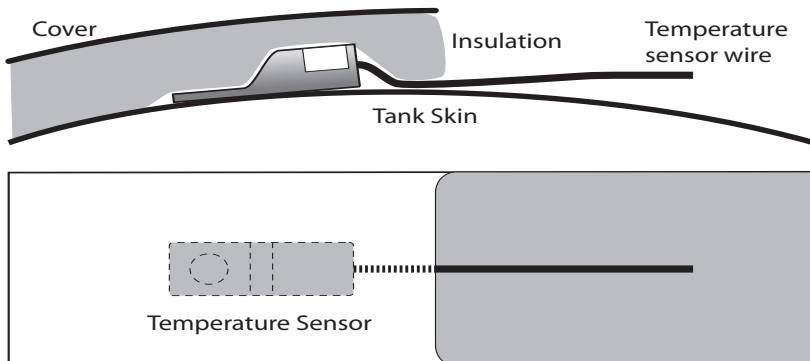

Temperature Sensor Installation

# Using the Menus

## Moving around

You can move around the menu system and change settings using the button on the front of the PLW.

There are 6 top level menu items in the PLW menu (TOP, BOT, WATT etc - see diagram below). Some menu items provide access to a sub-menu, and some of these sub-menus lead to further sub-menus.


A **short-push** advances the PLW to the next menu or setting. To do a short push, press on the button on the front of the PLW, and release it immediately.

A **long push** “selects”, to move into a sub-menu or to allow you to change settings. To do a long push, press the button, holding it down until the menu changes (about one second).

## Getting back

Wherever you are in the menu system, a series of short-pushes will bring you back to the top-level menus without changing any settings. There are two exceptions: when a number is flashing (you are already changing a setting); and when you see the word “EXIT” (you’re in “History” mode - see page 12).

# PLW MENU MAP

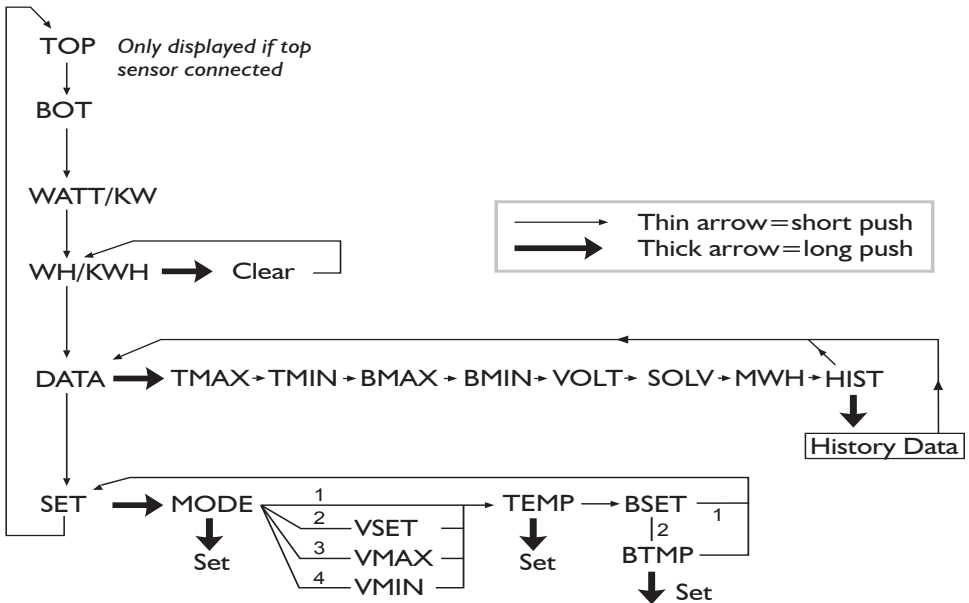



## Choosing your settings

If you are using only one PLW, not sharing the array with any other system and you are happy with the default thermostat setting of 67 °C, there is no need to make any settings changes. The default settings are already the best you can have. You can skip this section.

**Note: the settings are not lost if the power to the PLW is disconnected.**

### 1. Set the MODE

The PLW has four operational modes (see below). To set the mode:

- Short-push until the display shows “SET”.
- Long-push once, the display will show MODE and a mode number
- Long-push once, the number will start flashing.
- Short-push until the number is right for the mode you want.
- When the mode number is correct, long-push once to set it.

#### MODE 1

The default is MODE=1. The PLW adjusts the loading on the array to maximise the amount of energy going into heating the water. This style of operation is commonly referred to as MPPT (Maximum Power Point Tracking).

#### MODE 2

The PLW operates the array at a fixed voltage. The voltage must also be set. This is useful if sharing the array (see page 13)

#### MODE 3

The PLW operates in MPPT mode like MODE1 except that there is a maximum array voltage. The maximum voltage must also be set.

#### MODE 4

The PLW operates in MPPT mode like MODE1 except that there is a minimum array voltage. The minimum voltage must also be set.

Now short-push once to move to the next setting

### 2. Set the Voltage.

If you select MODE=1 you do not need to set a voltage. For MODE= 2,3 or 4 there is now a voltage to set on the display.

- Long-push once, the voltage will start flashing.
- Short-push until the voltage shows the desired value.
- When the value is correct long-push once to set it.
- Short-push once to move to the thermostat setting

### 3. Set the thermostat temperature (TEMP)

- Long-push once, the temperature will flash
- Short-push until the temperature shows the desired value
- When the value is correct, long-push once to set it

### 4. Set the boost relay (BSET)

See page 11 for details of BSET setting.

*You have now set all the settings. Do a short push to return to the main menu.*

**Note:** It is tempting to set the maximum temperature that the tank is rated for as this gives the maximum energy storage. But, be aware that many tanks will last longer at

lower temperatures. Also if the array will be used for another task after the water is hot, setting a lower temperature will mean that it becomes available sooner. Enamelled steel tanks should not be used at temperatures over 70°C. If you are not sure, do not set the thermostat higher than 70°C.

The mechanical thermostat supplied is set to 80°C. (This **MUST be set higher** than the PLW setting.)

## How it works

The PLW heats the water in your tank with electrical energy from a solar array. The DC current from the array powers the PLW. The PLW supplies exactly the right amount of current to the element to keep the solar array at a target voltage. The target voltage will be set automatically in mode 1, set on installation in mode 2, or a combination of the two in mode 3 and mode 4. This arrangement means that the element voltage is often lower than the array voltage.

The PLW is only powered when the array is in sunlight so it does nothing at night-time and no data or settings are available at night. The PLW turns on in the morning when the array voltage reaches 26V and turns off in the evening when the array voltage falls below 13V.

There is no battery in this system.

### Output current limit

The output current is limited to 36A.

This protects against the possibility of over-loads when a large solar array is installed.

## Monitoring your system

Your PLW gives you a lot of information about your hot water system. Here are some questions your PLW can answer:

### How warm is the water?

The TOP and BOT screens give you accurate real time information about the water temperature in the tank.

### Is there enough warm water for a shower?

The TOP reading tells you that all the water above the sensor is at the same temperature as the sensor or warmer. If the TOP sensor is mounted a suitable distance below the tank outlet, the TOP reading tells you how warm that much of the water is. Most people find 42°C is adequate.

### How well is the solar array performing?

The Watt/KW screen shows the real time array power. The SOLV screen in the DATA sub-menu shows the array open circuit voltage.

### How much energy has been collected today?

The Wh/KWh screen shows the energy collected today.

### How hot did the water get today?

The TMAX and BMAX screens show the maximum temperature for the TOP and BOT sensors so far today. TMAX and BMAX are found in the DATA sub-menu

### How cold did the water get today?

The TMIN and BMIN screens show the minimum temperature for the TOP and BOT sensors so far today. TMIN and BMIN are also found in the DATA sub-menu

## The LCD Screen

Extra system information is given by words that appear along the bottom of the LCD screen.

### **BOOST:**

The 'BOOST' annunciator comes on under two conditions depending on the **BSET** setting. The PLW also activates the "boost" relay output when BOOST is displayed enabling automatic boosting schemes to be used or warns the user that manual intervention is required or that the water should not be used.

### **BSET=1**

The PLW has detected that auxiliary energy is required. This occurs when the water temperature, and time at that temperature, do not meet the requirements for safe hot water. A latching type relay may be needed to hold the boost state overnight.

### **BSET=2**

The PLW has detected that the top temperature sensor reads less than the **BTMP** setting AND the PLW has been on for more than 6 hours. So if the tank has not heated sufficiently after 6 hours, backup energy can be requested. This could be the mains or a generator. The 6 hour delay gives the solar a chance to heat the tank by itself before calling for backup. Boost is disabled once the top temperature rises to 10°C above the BTMP setting.

### **LOAD:**

The PLW is delivering power to the element. LOAD will not be visible when there is no power being delivered, usually because the set temperature has been reached.

## Summary of menu items

<b>TOP</b>	Temperature of top sensor
<b>BOT</b>	Temperature of bottom sensor
<b>Watt/kWh</b>	Element power in real time
<b>VOLT</b>	Operating voltage of the array in real time
<b>SOLV</b>	Array open circuit voltage. (When in this screen, heating is suspended)

*The parameters above are only available in real time, i.e. they are not stored to history*

<b>TMAX</b>	Maximum temperature of the top sensor today
<b>TMIN</b>	Minimum temperature of the top sensor today
<b>BMAX</b>	Maximum temperature of the bottom sensor today
<b>BMIN</b>	Minimum temperature of the bottom sensor today
<b>WH/KWH</b>	Energy collected today
<b>MWH</b>	Energy collected in the life time of the PLW

*At the end of each day, these parameters are stored in the history.*

<b>DATA</b>	Sub-menu heading
<b>SET</b>	Sub-menu heading
<b>MODE</b>	Setting
<b>VSET/VMAX/VMIN</b>	Voltage setting required by the Mode setting (in the SET sub-menu)
<b>TEMP</b>	Setting for thermostat function temperature
<b>BSET</b>	Selects boost relay function
<b>BTMP</b>	Setting for low temperature alarm on boost relay (Only visible if BSET=2)

## Retrieving historical data

In addition to storing today's performance data, the PLW keeps information about the last 30 days of operation.


Historical performance information can be accessed from the DATA sub-menu (see diagram below). After a long-push on DATA, short-push until you see HIST. A

long-push on HIST will put you in "history mode", where you can cycle through each day's data. (Note the day numbers go backwards- i.e. DAY 1 means yesterday, and DAY 30 is 30 days ago.)

The history parameters are stored when the sun goes down.

### PLW History Menu

→ Thin arrow = short push  
 ⇨ Thick arrow = long push

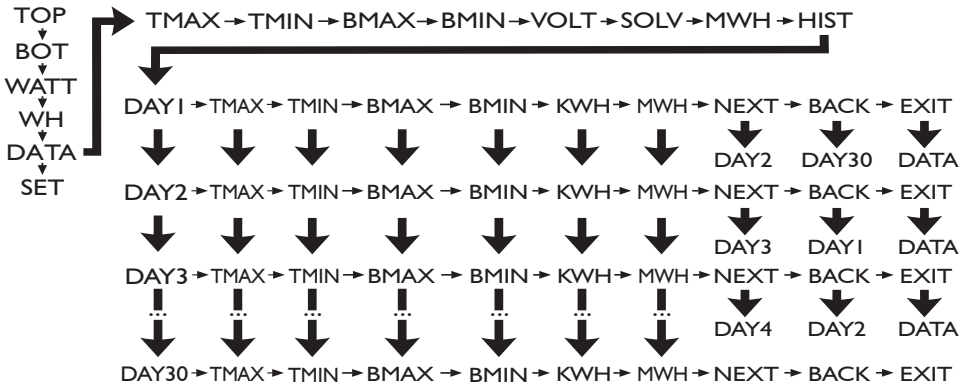

## Water quality safety.

Care must be taken with any hot water system to avoid a build up of bacteria. Hot water is considered safe if it has been heated to a specific temperature for a specific length of time.

This is important for limited energy systems like the PLW in poor weather conditions where the system may be struggling to get the water hot enough.


The PLW monitors the water temperature and times. If the conditions for Legionella prevention are not met, then it turns on the 'boost' alarm. (BOOST appears in the display). It also closes the relay contacts

on the 'boost' output. **(Note: BSET must be set to 1 for Legionella output).** The boost output can be used to activate an alarm or turn off a solenoid in the water line. The PLW turns off at night, so the boost signal disappears overnight (but its state is remembered and restored in the morning). The boost alarm must be responded to during the day or a latching alarm must be used to hold the state. If the alarm comes on, supply external energy by lighting the stove or running a generator. Otherwise, wait until the alarm clears before using any hot water.

## Array sizing

The PLW should be used with a 2.5 ohm element. This is optimised for operation with a 48V array made up of series pairs of panels where each panel has 60 cells.

With this array, up to 80A of array current capability can be installed. *The element will limit the delivered array current to 30A.* The maximum power the element can draw is about 2kW (at NOCT). But, the larger the array, the more energy it will be able to deliver during periods of low solar input. This is deliberate over powering for winter conditions.

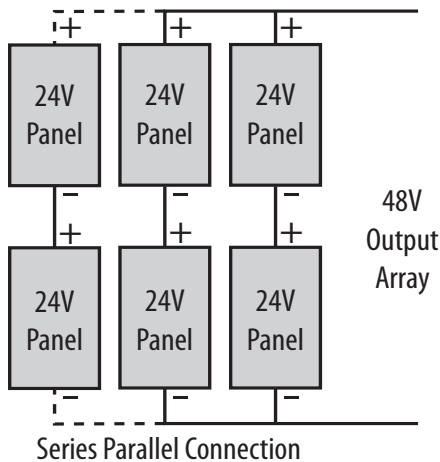

An array of 72 cell panels can also be used, but the total installed array current ( $I_{mp}$ ) **must be less** than 30A (at 80V).

The 2.5 ohm element will operate with a 24V array, but it will deliver much less power to the water. With a 72 cell panel, the maximum power is only about 400W. Unless the 24V array produces less than 15A, you would be better off to rewire the array for 48V or use an element customised for 24V operation. Contact Plasmatronics for further information.

## Sharing the array

It is possible to connect the PLW to an array that is also used to charge batteries. It does not matter what style or brand of charge controller is used to charge the batteries *so long as the array connections are not earthed.* A suitably rated diode with an appropriate heat sink must be fitted between the PLW and the array. Mode 2 or Mode 4 is recommended. Select a voltage equal to the expected Maximum Power Point Voltage ( $V_{mp}$ ) of the array. When the batteries are charging and need all of the available charge current, the array voltage will be below the setting and the PLW will take no power. When the batteries are close to full and no longer need all the charge current, the array voltage will rise and the PLW will start taking some of the power. The PLW will take all the power that the batteries don't need until the water is hot and the PLW also turns off.

It is also possible to share the array with a second PLW unit (or multiples) so that you can heat more than one hot water tank with one array. If no other devices are connected, no diodes are necessary. Use  $MODE=2$  and set the voltages such that the highest priority tank is set to the expected  $V_{mp}$  (Maximum Power Point Voltage) in real operating conditions (panel hot). If in doubt set it to 52V for 60 cell modules or 63V for 72 cell modules. Set the PLW for the next tank one Volt higher etc. Each PLW can have its own temperature setting.

## Tanks with two elements



The typical arrangement for two elements in one tank is one fitted to the bottom

and one near the top. This arrangement is optimised so that the bottom element usually provides the bulk of the hot water and the top element is used when the hot water runs out so that a small amount can be heated up quickly. This is good for mains/grid connected systems using night rate electricity for the bottom element and expensive electricity only in the top element if necessary. The same arrangement also suits PV hot water quite well. If only a small amount of solar energy is available, only the top of the tank is heated. If lots of energy is available, the whole tank is heated creating a reserve for future poor weather.

### Setup for two element tanks

To drive both elements with the PLW in this way, buy a PLW Top Element Kit. This comes with a second element and a change over thermostat prewired with long wire tails to reach to the bottom element. Wire according to the diagram shown.

Alternatively, the upper element can be wired to an auxiliary energy source such as the mains/grid or a diesel generator. In this case the PLW is wired only to the

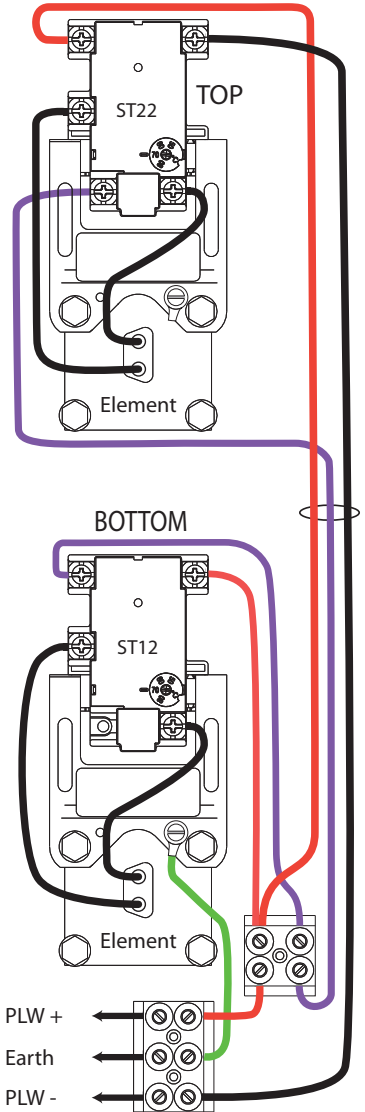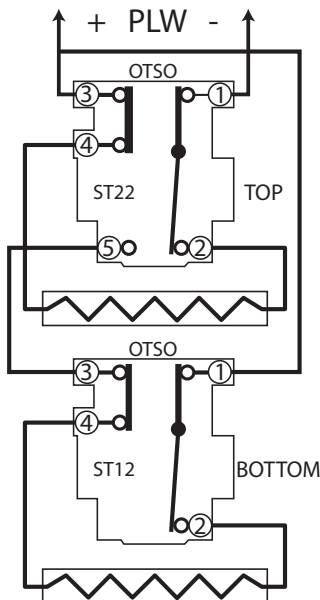

**Two Element Connection Diagram**  
! Use the prewired connections supplied

bottom element. If a diesel generator fitted with remote start is used the auto start circuit may be wired to the BOOST output terminals enabling demand start when active (see page 11). The boost relay can drive a mains

relay. It can be a latching type relay.

## OTP Safety Devices

When used on pressurised tanks, there must be an Over Temperature Protection device (OTP) fitted to prevent the tank from boiling. This safety device is incorporated with the mechanical thermostat supplied in the PLW kit.

The PLW uses its own internal temperature sensors to provide the

normal thermostat function.

If the PLW should fail for some reason, then the mechanical thermostat acts as a backup. If the mechanical thermostat also fails, the OTP device is the final backup. If the OTP device does operate for any reason, then there is a fault in the system that must be fixed before using the PLW again.

## Specifications


Nominal Array Voltage	48	V
Maximum solar array Voc	100	V
Maximum average load (element) current	30	A
Maximum average solar current	30	A
Maximum voltage between the "Boost" relay terminals	85	V
Boost relay terminals maximum wire size	2.5	mm <sup>2</sup>
Maximum "Boost" relay contact current	300	mA
Temperature sensor operating range	0 to 100	°C
Maximum ambient temperature without derating	50	°C
Maximum storage temperature	70	°C
Meter accuracy	< +/-2% FSD +2 dig	
Maximum wire size for Solar connection	35	mm <sup>2</sup>
Minimum wire size for Solar connection	6	mm <sup>2</sup>
Maximum wire size for Load connection	16	mm <sup>2</sup>
Minimum wire size for Load connection	6	mm <sup>2</sup>
Earth terminal maximum wire size	6	mm <sup>2</sup>
IP Rating	IP20	
PLW size	520H x 175W x 90D	mm
Kit size and weight	535x190x185 mm	5.8kg

# Safety

The PLW can have voltages within the case equal to the solar array open circuit voltage.

If the cover is to be removed while the PLW is connected to the solar array, first turn off the circuit breaker to disconnect the PLW from the solar array.

When the cover is removed, there is a red led indicator showing the voltage on the storage capacitor. Do not touch any of the wiring until the red indicator goes off. This can take up to 40 seconds.

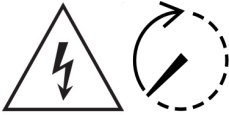

40 sec. Shock hazard  
Wait until red indica-  
tor turns off



Consult user manual  
for cable sizing.

## Temperature Sensor Error Display

### Bottom Temperature screen (BOT)

If the bottom temperature sensor is not connected, is open circuit or reads less than 5°C, then the screen will display **Err**. If the sensor is short circuited or reads greater than 99°C then the screen will also display **Err**.

### Top Temperature screen (TOP)

If there is no top temperature sensor installed or it is open circuit or the top temperature reads less than 5°C, then the top temperature screen will not be displayed. If the top temperature sensor is short circuited or reads greater than 99°C then the screen will display **Err**. If the top sensor is OK but there is a problem with the bottom sensor then the display will **flash**.

*No user maintenance is required.  
Solar array short circuit current must  
be less than 80A.*

*In lightning prone areas, external  
lightning protection is advisable.*

Plasmatronics Pty Ltd  
ABN 98 073 758 497

<http://www.plasmatronics.com.au>

Rev. U10. 13102021